



USER MANUAL

**Fries Warmer Station
FWS 560
FWS 600**

1. General matters

- In the operation, installation and maintenance, please pay attention to carefully follow the steps below to ensure the safe use of this equipment.
- Keep the manual for future use or leave it to the next user.
- Remove the outer packaging to ensure the integrity of the device. If you have any questions, please do not use it, and please contact the seller. Do not put the packaging materials in the reach of children to avoid danger. (Materials are plastic, nails, sparse wood boards, etc.)
- When the equipment is not in use, the power must be turned off to avoid danger.
- When repairing, please call the repairer of the seller to repair and use original parts.
- Do not rinse directly with water.
- Clean the stainless steel surface properly and regularly to prevent surface oxidation and chemical damage from destroying the equipment.
- Children should be supervised to ensure that they do not play with appliances.

Warn

 
Any modification, and incorrect installation, adjustment, repair or maintenance may cause property damage or personal injury. If you need to adjust or repair, you should contact the supplier and be carried out by trained professionals.

 
2. Safetyinstructions

The user' s power supply side must be equipped with a qualified leakage switch and a reliable grounding device.

Size parameters:

Model	Dimensions (LXWXH)mm	Voltage	Power	N.W
FWS 560	700X600X700	220v/50hz	825W	21.3kg
FWS-600	600X700X1500	220v/50hz	825W	37.5kg

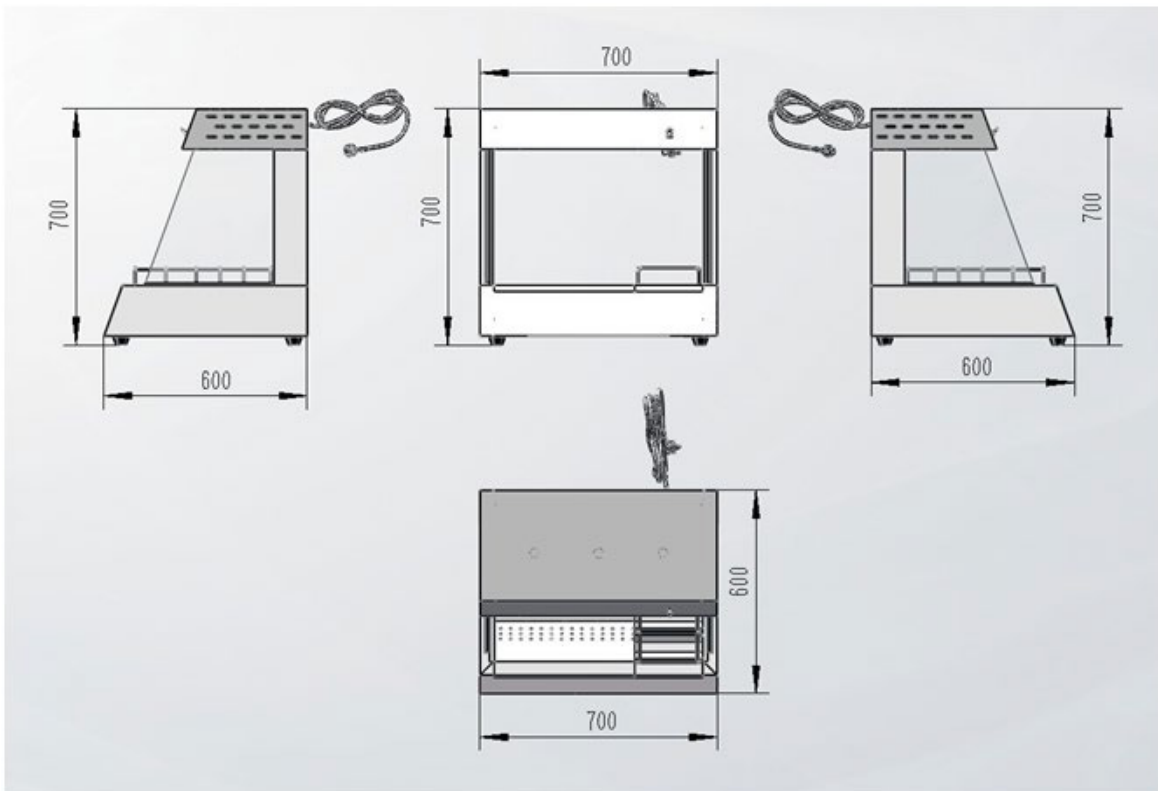

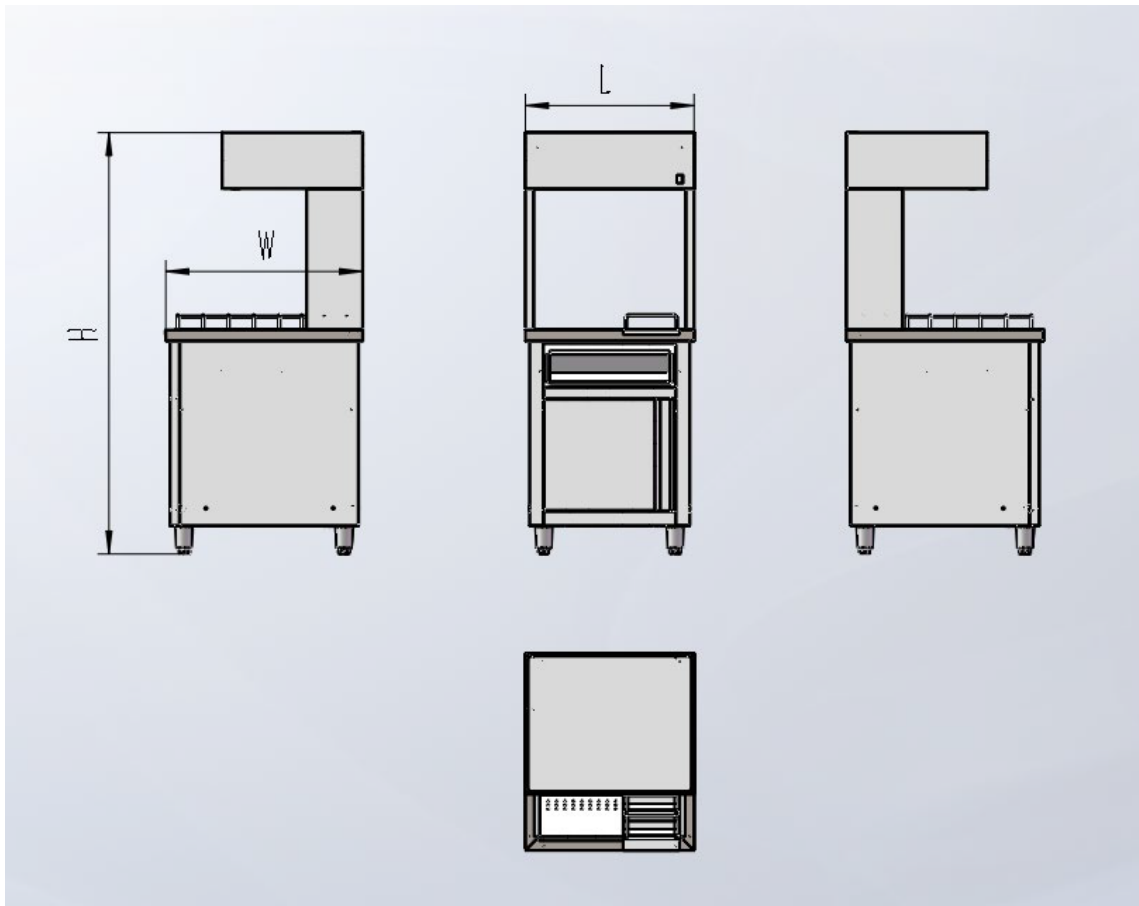

3. Precautions and use environment

 
- a) Installation and commissioning work should be carried out by professionals who hold a formal qualified electrician certificate.
- b) Check whether the power supply voltage is consistent with the nameplate mark of the machine, the wiring parts are firm, and the safety grounding wire is firm.
- c) Do not pull the power cord forcibly to prevent the power cord from falling off and causing electric leakage and electric shock accidents.
- d) The workplace should be well ventilated and dry, and it is strictly forbidden to stack flammable materials next to the equipment.
- e) The equipment should not be stored in the open air for a long time, and should

be placed in a warehouse with a relative humidity of less than 85%, well ventilated and no corrosive gas. For temporary storage in the open air, rain protection and corresponding protective measures shall be taken.

4. Instructions

- a) Turn on the main power supply and turn the power switch to the on position.
- b) After use, turn the power switch to the off position, turn off the main power supply, and leave after confirming safety.

5. Electrical schematics

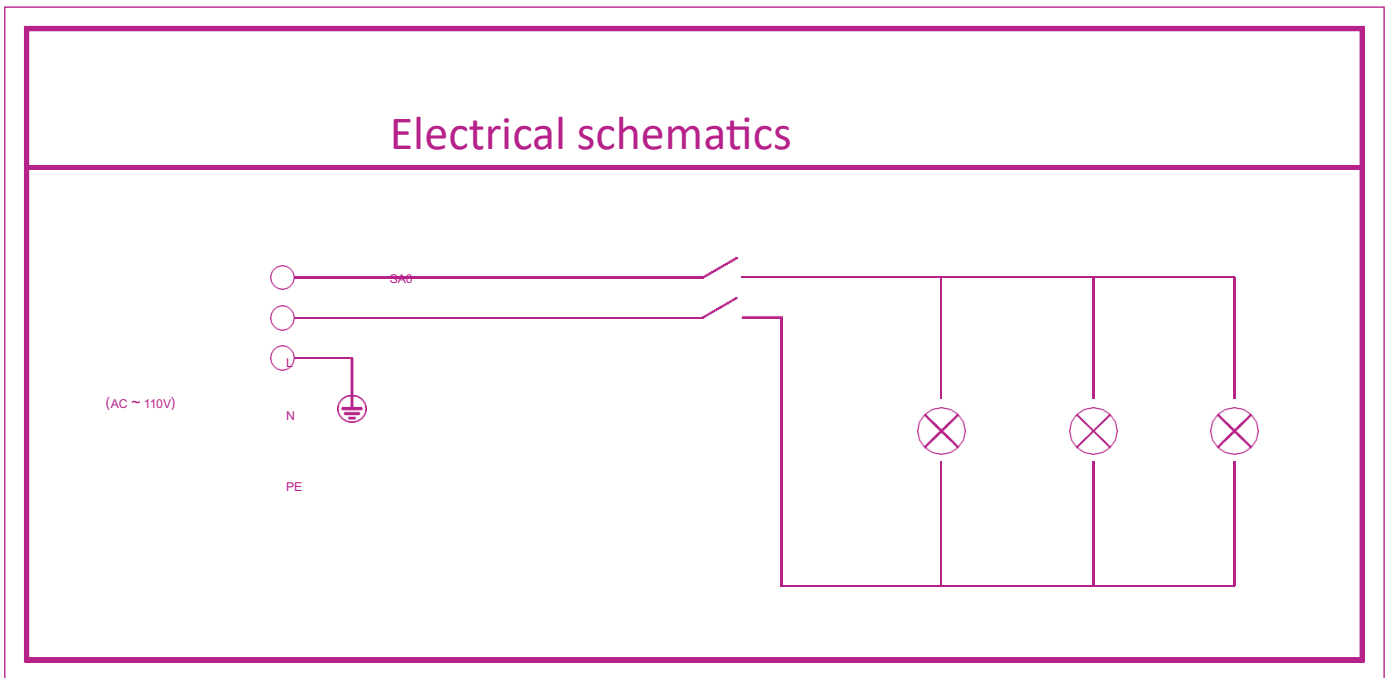

6. Repair and maintenance

- a) Turn off the power before cleaning the machine.
- b) If the power cord is damaged, it must be repaired and replaced by professionals in order to avoid danger.

- c) Clean up food residues before leaving get off work to avoid affecting food hygiene.
- d) It is strictly forbidden to rinse or spray the machine with water when cleaning.
- e) When the observation window glass is stained with oil, please scrub it in time.

When not in use for a long time, the main power supply should be disconnected to ensure safety, and the power supply line should be checked frequently to avoid loosening.

7. Precautions


- a) The operator must strictly follow the procedures in the instruction manual.
- b) The user' s power supply voltage must conform to the equipment voltage.
- c) The installation location should be away from moisture, corrosion, and no flammable products around.
- d) When the machine is not in use, the power switch should be turned off to avoid accidents. All maintenance work must be performed after cutting off the power supply.
- e) If the machine breaks down, do not disassemble it by yourself, please contact the authorized maintenance department or dealer for repair.

8. Failure and cause analysis

Failure phenomenon	Analyze the reasons	Approach
-------------------------------	----------------------------	-----------------

Light bulb does not light up	1. The power supply has no electricity or the fuse is blown	1. Repair the circuit or replace the fuse
	2. The work switch is not pressed	2. Press the work switch

9. Exploded view

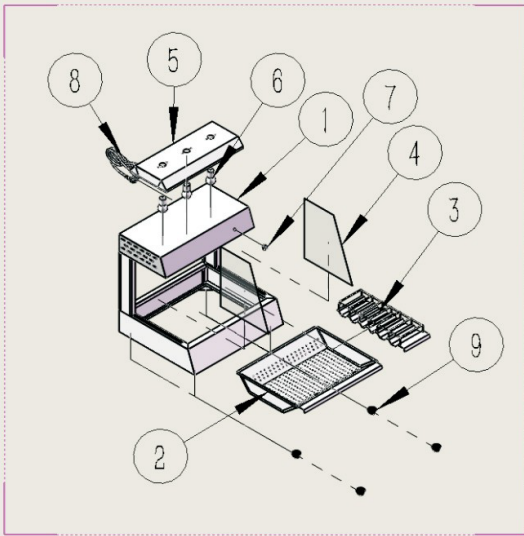

9	Rubber feet	4	
8	Power cable	1	
7	Switch	1	
6	Light bulb	3	
5	Lampshade	1	
4	Grass	2	
3	Shelving	1	
2	Fries plate	1	
1	Machine frame	1	
serial number	Part Name	QTY	

10. List of Annexes

Serial number	Part name	Specification	QTY	Remark
1	Whole machine	700x600X700mm	1	
2	Fries plate	635x525X100mm	1	
3	Shelving	/	1	
4	Light bulb	220v/275w	3	

Marketed globally by:

TRUFROST AND BUTLER PRIVATE LIMITED

1215, 12th Floor, Tower B, Emaar Digital Greens, Golf Course Extn. Road, Sector 61, Gurugram – 122011 (India)

T. +91-7303166766 info@trufrost.com

www.trufrost.com