

TRUFROST & BUTLER

USER MANUAL

Countertop Electric Warming Tray:

CEW-0.25

Please read these user instructions carefully before connecting the appliance to prevent damage due to improper use. Please pay special attention to the safety regulations.

Safety regulations

- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Keep the appliance and electrical plug away from water and any other liquids.
- In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician.

Not following these instructions could give rise to life-threatening situations.

- Suited for keeping food at the right temperature.
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not touch the plug with wet or damp hands.
- An earthed 230 VAC electrical socket.
- Regularly check the plug and cord for any damage. Should the plug or cord be damaged have it/them repaired by a certified repair company.
- Do not use the appliance after it has fallen or is damaged in any other way.
- Have it checked and repaired, if necessary, by a certified repair company.
- Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Make sure that no one can accidentally pull the cord (or extension cord) loose or trip over the cord.
- This appliance is intended solely for warming food.
- Always keep an eye on the appliance when in use.
- Children do not understand that incorrect use of electrical appliances can be dangerous.
- Therefore, never let children use without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- **Warning!** As long as the plug is in the socket the appliance is connected to the power source.

- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.

Special safety regulations

- Do not use any extra devices that are not supplied along with the appliance.
- Caution! Make sure the cord does not come in contact with hot components while using the appliance.

Function

The warming tray is ideally suited for keeping food at the right temperature.

Safety instructions:

Only connect the appliance to an earthed 230 VAC electrical socket.

Avoid overloading.

Turn off the appliance after use by unplugging the equipment from the mains supply. Unplug the equipment from the mains supply before filling it with water or cleaning. The electrical installation must satisfy the applicable national and local regulations.

Technical details

Model no.: CEW-0.25
220~240V AC / 50-60 Hz 230W

Installation

Only connect the appliance to an earthed 230 VAC electrical socket.

Use

Turn on the on/off key, select the "+" key, the LED screen will display 85°C by default, and the temperature range is 65-105°C (65°C /70°C /75°C /80°C /85°C /90°C /95°C /100°C /105°C)

Lock key: After selecting the child lock, the insulation board cannot select other temperature gear. Lock in one second and unlock in three seconds

After use

Select the ON/OFF key to shut down the device.

Allow the plate to cool down.

Clean the appliance (refer to maintenance).

Maintenance

- Before cleaning, always unplug the equipment from the mains supply.
- Never immerse the Hotplate in water or other cleansing agents.
- Clean the Hotplate with a damp cloth.
- Do not use aggressive or caustic cleansing agents.
- Wherever possible, avoid water coming into contact with electrical components.

Faults

Always contact your supplier when a fault occurs.

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one year of its purchase will be corrected by free repair or replacement provided that it has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If it's under guarantee, state where and when it was bought, and include proof of purchase (e.g. till receipt).

In line with our policy of continuous product development we reserve the right to change product, packaging and documentation specifications without notice.

Discard

At the end of the life of the appliance, please cast of the appliance according to the on that moment applying regulations and guidelines.

Marketed globally by:

TRUFROST AND BUTLER PRIVATE LIMITED

1215, 12th Floor, Tower B, Emaar Digital Greens, Golf Course Extn. Road,

Sector 61, Gurugram – 122011 (India)

T. +91-7303166766 info@trufrost.com

www.trufrost.com