

**TRUFROST & BUTLER**

 
**USER MANUAL**

**Electric Deck Ovens:  
Prodigy – Deck  
Little Prodigy - Deck**



## Electric Deck Oven

### Prodigy – Deck, Little Prodigy - Deck

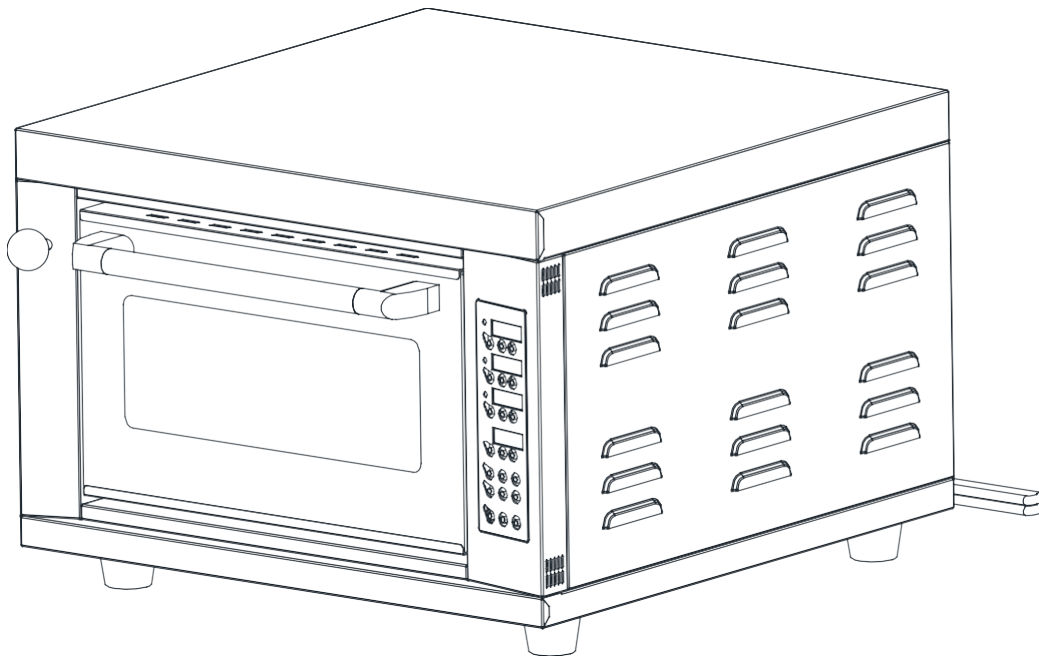

Thanks for your using of our company product, in order to ensure the product performance, please read this manual to reduce unnecessary loss and damage, and get a further study of our product characteristic, installation and operation. Also please keep the manual for further reference.


# Index

 - I. Safety
- II. Operating of the digital board
- III. Functions
- IV. Machine illustration diagram
- V. Installation instruction
- VI. Warning
- VII. Maintenance
- VIII. Trouble shooting
- IX. Specification
- X. Wiring diagrams



## Safety

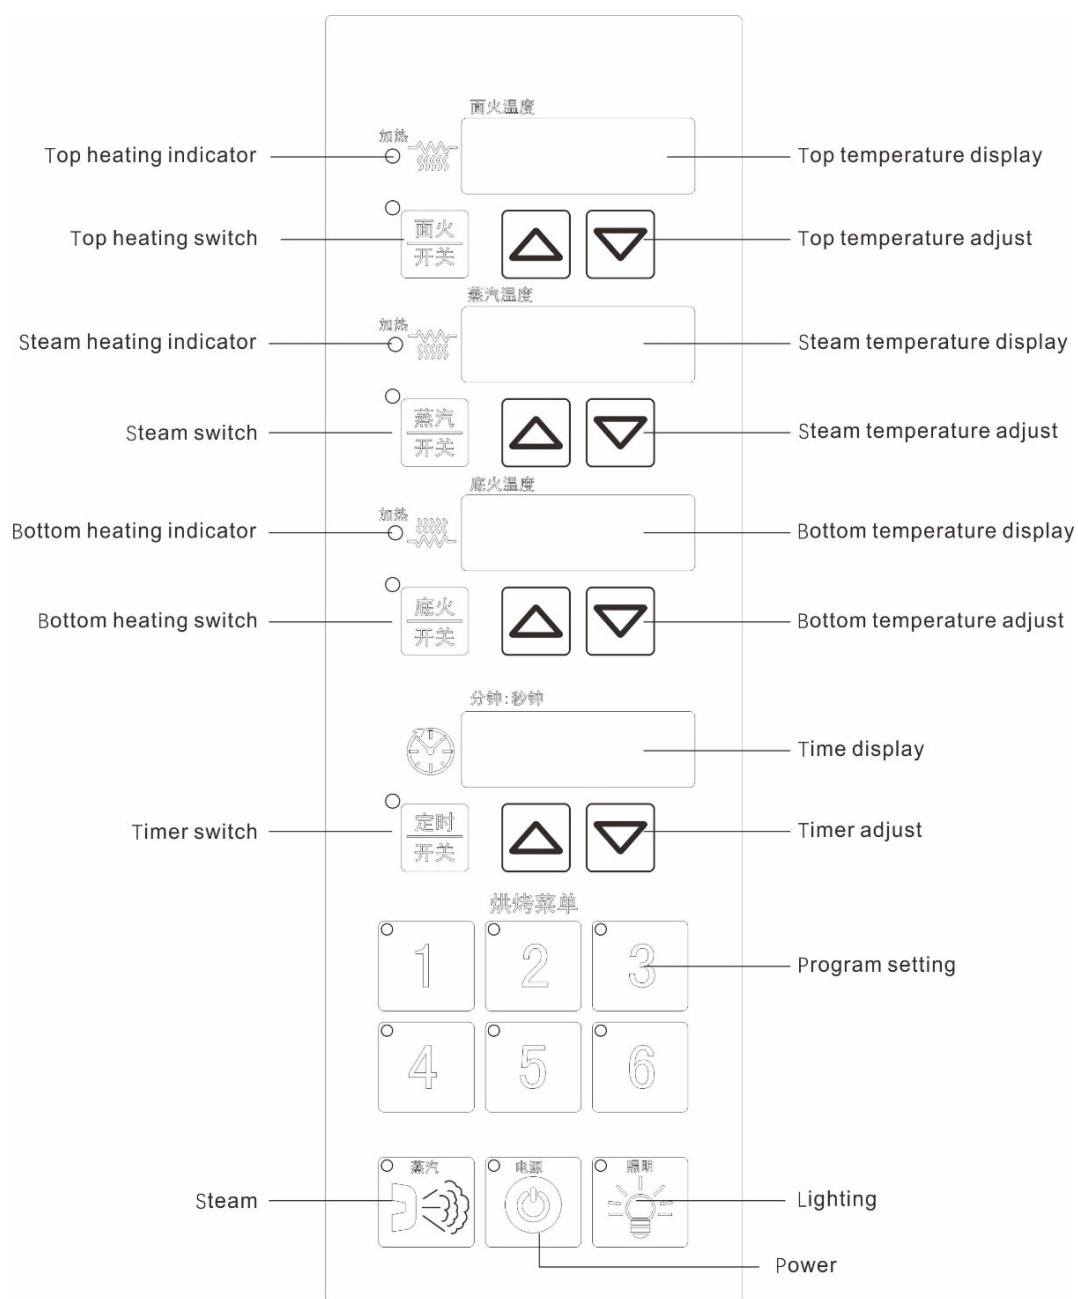

1. Make sure the input power is suitable (Single Phase connection) for this oven using. The parameter of the socket and the plug should be match.
2. The oven should be working inside the temperature range which is mentioned on the parameter, and the ground wire must be connected.
3. The oven shouldn't place near oil drum/cotton/cloth and any other inflammable materials. Also please don't washing or spraying beside the oven.
4. Please prevent any object from drop into the oven to make it short out.
5. Please don't leave the oven while it is working.
6. Please don't clean the oven while it is working, and don't wash it with gasoline.
7. Don't use damaged power wire, and replace the damaged spare part before using in case of electric leakage.
8. Please turn off the power before maintenance.
9. Sharing the same ground electrode with any other machine is forbidden.
10. The oven should be installed or maintained by professional serviceman.
11. Please leave enough space behind the oven for heat dissipation.



## Operating of the digital board







**Power switch:** Press to turn on or turn off the power.

**Top heating on/off switch:** Press the switch to turn on/off the top temperature. press   to adjust the temperature. Temperature can be set from ambient to 350Degree

**Bottom heating on/off switch:** Press the switch to turn on/off the bottom temperature. press   to adjust the temperature. Temperature can be set from ambient to 350Degree

**Steam switch:** Press the switch to turn on/off the bottom temperature. press   to adjust the temperature. Temperature of steam can be set from 120Degree to 180Degree. To use steam function while baking press spray button after loading the product. Long press or short press the steam switch button depending on load quantity.

**Programming -Top heating and Bottom heating on/off switch:** Select any program from 1 to 6 press   to adjust the top and bottom temperature (long press the up or down button for 3s and the number can skip), then press   to set the time on that program. It will blink and temperature will get saved on that program. To start the program, press any program from 1 to 6 which is preset, oven will go on preheating mode. It will display current top and bottom temperature. Once it reaches set temperature the light indicator will turn off. Now you can open the door and load the product. After loading the product, press timer button and timer will start. When the timer ends, oven will beep and you can remove the product.

**Time display:** to display the timer counting, and it wouldn't count during preheating period.


**Light:** press once, light on; press again, light off.

**Spray:** when the current temperature reach 120°C, you can press "spray" button to spray the food.

## Function

1. 99 minutes timer for both top and bottom switch
2. 350°C thermostats.
3. Spray function is applicable.
4. Damper option to pull out hot air.

## Machine illustration diagram

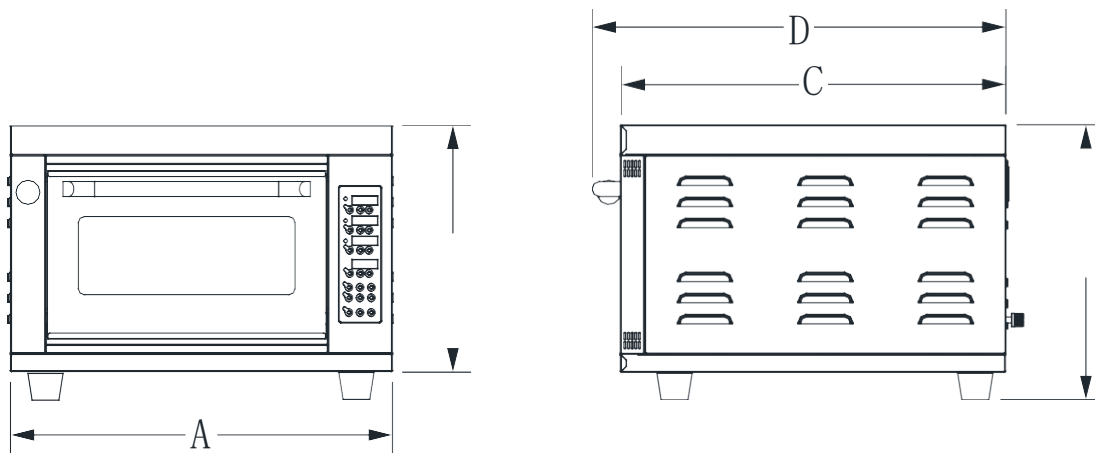

Model	A(mm)	B(mm)	C(mm)	D(mm)	E(mm)
Little Prodigy – Deck	635	410	640	687	456
Prodigy – Deck	838	410	740	787	456

## Installation instruction

1. All the electrical power unit and circuit connection must be installed by qualified electrician with safety standard.
2. Connection must be based on requirement.
3. Make sure the rubber feet have been installed securely.
4. Product should be placed in a well-ventilated room on solid platform, and we suggest to leave at least 10cm space between the product and the wall or barriers. Also place the product away from the combustible materials and equipped with fire extinguisher.
5. Remove the packaging film off the surface.
6. The power wire should be connected in accordance with electrical safety standards. Make sure the voltage and frequency conform to the parameter. And please install a double pole switch before connection. When the product working, the voltage error should be under  $\pm 10\%$  (**PS: the product must be connected to ground.**)
7. Connect the cable to the power supply fixed by using a screwdriver according to the connection diagram, then loosen the screw inside the power point and plug the cable in, make sure the sheet copper compress the power line tightly. If the connection is incorrect, it may cause joint heating and burning off the power cord.
8. Connect the water inlet behind the case to the water pipe with the configured bellows, and add a strainer on the water pipe joint in case of magnetic value block. Also, there is an exhaust pipe behind the case for needless steam to exhaust.

## Warning

1. If you want to clean, repair or move the machine, please pull out the plug first.
2. Please don't touch the switch or plug with wet hand.
3. The machine can't be flushed directly, and please be careful don't let the water flow into the switch when cleaning.
4. Keep the children from touching or using the machine.
5. The ground wire must be connected; all the connection must be reinstated after maintenance.

## Maintenance

1. Please pull out the plug first before maintenance, and clean it after cooling down the machine.
2. For daily cleaning, you can use a dry cloth to wipe off the grease on the chamber, don't flush the chamber directly. For the baking stone cleaning, please take out the stone, use a fur blush to clean its surface, and rinse it with water and dry it. (Don't use any cleanser essence to clean the baking stone, because the stone can strongly absorb water, so that the cleanser would be absorbed at the same time, it may affect the flavor of the food.)
3. We suggest maintain the machine by qualified electrician once in a month.
4. User need to know
  - 4.1. When doing maintenance please first pull out the plug.
  - 4.2. Before cleaning, please first cool down the chamber, and please don't use acid cleanser for cleaning.
  - 4.3. Only qualified staff can use the machine.
  - 4.4. Operator should read this manual to learn the function and operating of the oven before using.
  - 4.5. Please keep this manual for further reference.
  - 4.6. This machine can be only used for roasting and baking food, and it isn't applicable for any other using. And the thermostat can adjust the temperature between ambient to 350°C.
5. The oven is applicable for baking fresh or chilled flour products or meat.

## Trouble shooting


Stoppage	Solution
Not heating up	<ol style="list-style-type: none"> <li>1. Please check whether the connection is loose.</li> <li>2. Set your needed temperature again.</li> <li>3. Please check whether the power switch match up with the parameters</li> <li>4. Contact the service center for repair suggestion.</li> </ol>
Short circuit	Contact the service center for repair suggestion
Internal light	<ol style="list-style-type: none"> <li>1. Please check whether the connection is loose.</li> </ol>

not work	2. If the bulb is broken, pull out the power plug, cool down the chamber, then replace a new bulb.
Scorching smell appears	Contact the service center to check whether the connection short out.
Baking unevenly	Readjust the thermostats for each heating elements to see how they work, if they don't work well, please contact the service center to check whether the heating element need to change.
No steaming	<ol style="list-style-type: none"> <li>1. Please check whether the water pipe joint is blocked or disconnected.</li> <li>2. Please check the water faucet is blocked or disconnected.</li> <li>3. Please check if the magnetic valve works well, if it doesn't, please replace it with a new one.</li> </ol>

### Specification

Model	Temperature range	Dimension (mm)	Internal dimension (mm)	Voltage(V)	Power (KW)
Little Prodigy – Deck	Ambient to 350 °C	635X640X456	450X444X212	220V	3.6
Prodigy - Deck	Ambient to 350 °C	838X740X456	610X456X212	220V	4.0

### Wiring diagrams

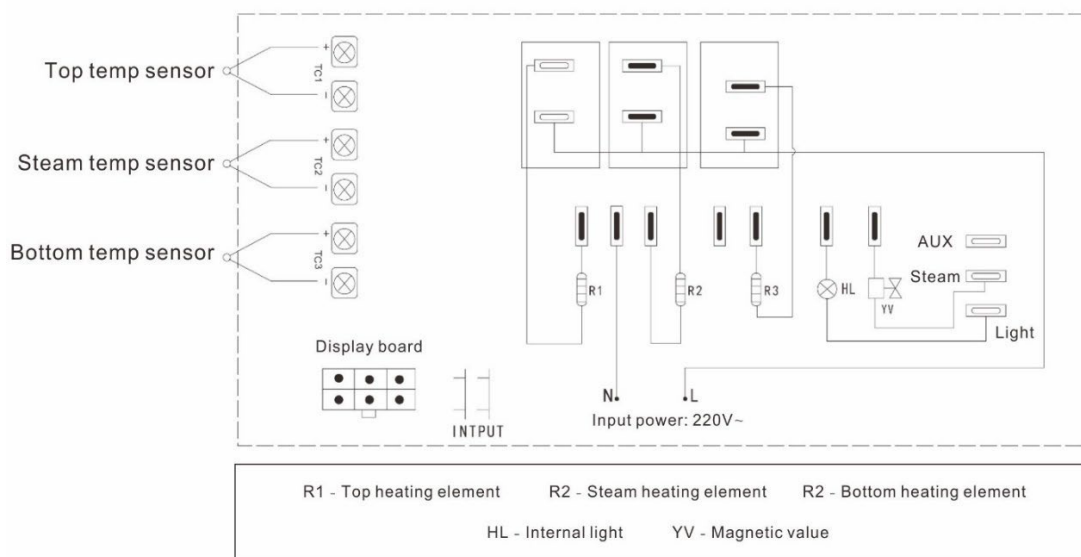

Marketed globally by:

**TRUFROST AND BUTLER PRIVATE LIMITED**

1215, 12th Floor, Tower B, Emaar Digital Greens, Golf Course Extn. Road, Sector 61, Gurugram – 122011 (India)

T. +91-7303166766 info@trufrost.com

[www.trufrost.com](http://www.trufrost.com)