

TRUFROST & BUTLER

USER MANUAL

**Floor Standing 21 Litre Single Tank
Electric Fryer with 2 Baskets:
WONDERFRY 21.2E**

Butler Floor Standing 21 Litre Single Tank Electric Fryer is designed by advantages of overseas products.

They are special designed for Fast-food restaurant. They have features of new style, well structure, easy operation and fast heated.

1. Structure

1. There are two temperature setting switch. One is on the top of electrical box; another, it can adjust the temperature of oil. Another is inside the box and it will cut of electricity when the temperature is 230 centigrade.
2. Heating tube can be turned in order to clean heating tube and oil bowl.
3. There is a timer alarm system at the range from 0 to 99 minute. User can set the time to fry food and the system will be on when time is up.

2. Technical parameter

Model	Wonderfry 21.2E
Name	Electric Fryer
Voltage	3-380v
Power	10KW
Oil Bowl	1
Size	360×420×270MM
Temperature Range	50-230°C

3. Transportation and storage


During transportation, the machine should be careful handled and prevent from shaking. The packaged machine should not be stored in open air long. It should be put in a ventilated warehouse without causticity gas. And it should not be put up side down. If it needs to be stored in open air temperately, measurement against raining in needed.

4. Safety Guarding

1. This product should be put on a smooth place. Its two sides are recommended be put more than 10cm from any obstacles and its back is over 20cm.
2. The voltage should be coordinated with the voltage in data plate. When the machine is running the voltage should not exceed±10.
3. Do not put anything in front of the switch. Install fuse and leak electricity protector.
4. Use wire at least 2.5mm² and make sure the well ground connection for safety sake.
5. Before using this product, please check al parts and power supply and ground connection.
6. The connection and installation of this product should be done by professionals.
7. Power cord draws with yellow and green two ground wires. User should use copper bolt to link up this ground wire and another safe one.
8. If user change power cord user should use YCW oil-resisting wire with yellow and green two ground wires. Count to use by 8-10A/mm²

5. Operation

1. Inside the oil bowl there are two lines. The amount of oil can not lower than the low line and over the high one.

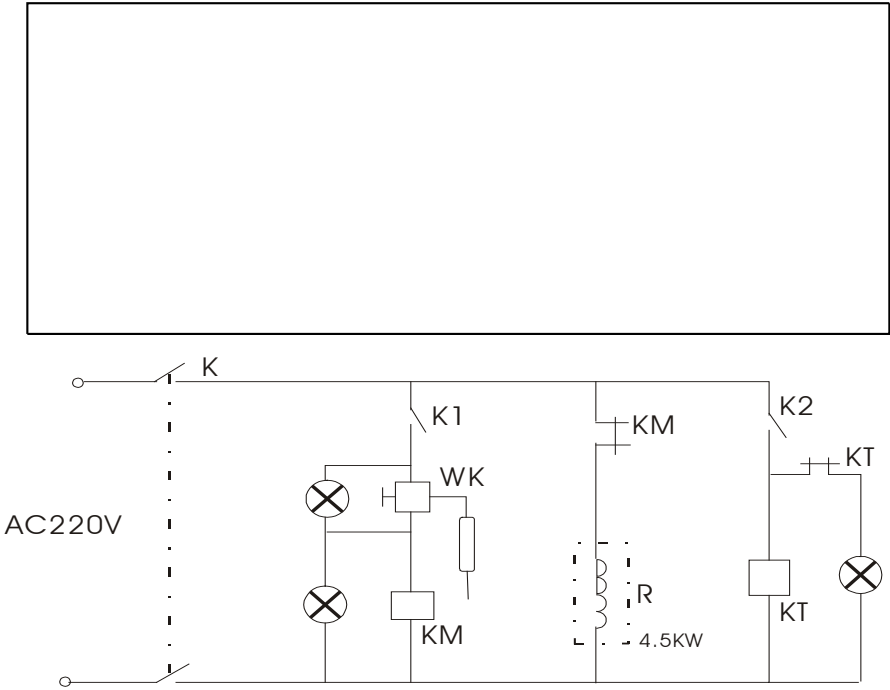

Marketed globally by:

TRUFROST AND BUTLER PRIVATE LIMITED

1215, 12th Floor, Tower B, Emaar Digital Greens, Golf Course Extn. Road, Sector 61, Gurugram – 122011 (India)

T. +91-7303166766 info@trufrost.com

www.trufrost.com